



# AIRDRIVE SERIAL LOGGER MODULE QUICK START

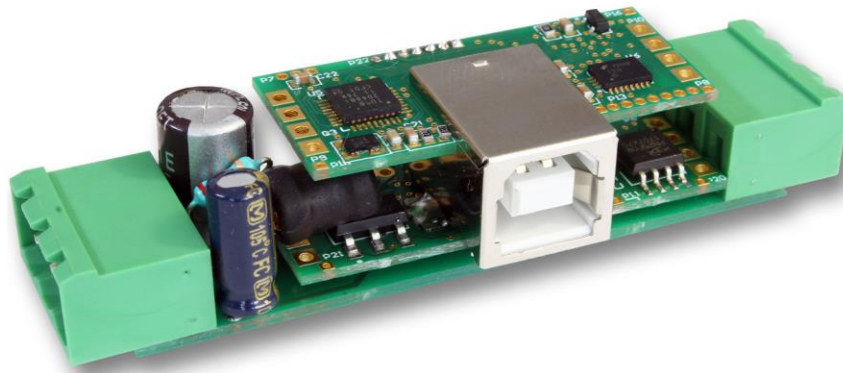

## Important tips:

- Device requires 5V DC power through USB-B connector, or 9V...24V DC power through terminal block connector
- To access data, connect to Wi-Fi network **AIR\_XXYYZZ** and open **192.168.4.1**
- Device needs to be configured to match monitored serial bus

To power device with +5V DC, apply power with a USB cable. Alternatively, power the device with +9V...+24V DC using the terminal block connector.

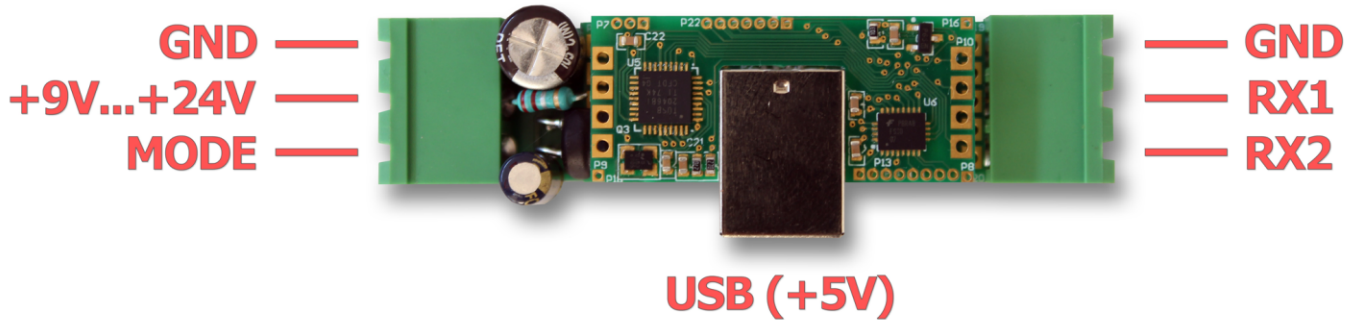

Connect up to two serial sources with RS-232 logic levels to inputs RX1, RX2


Connect to WiFi network  
**AIR\_XXYYZZ**

Use any web browser to open address  
**192.168.4.1**

**Information:** the device is actually a WiFi Access Point to which you can connect to



Open the settings subpage  
to configure the device

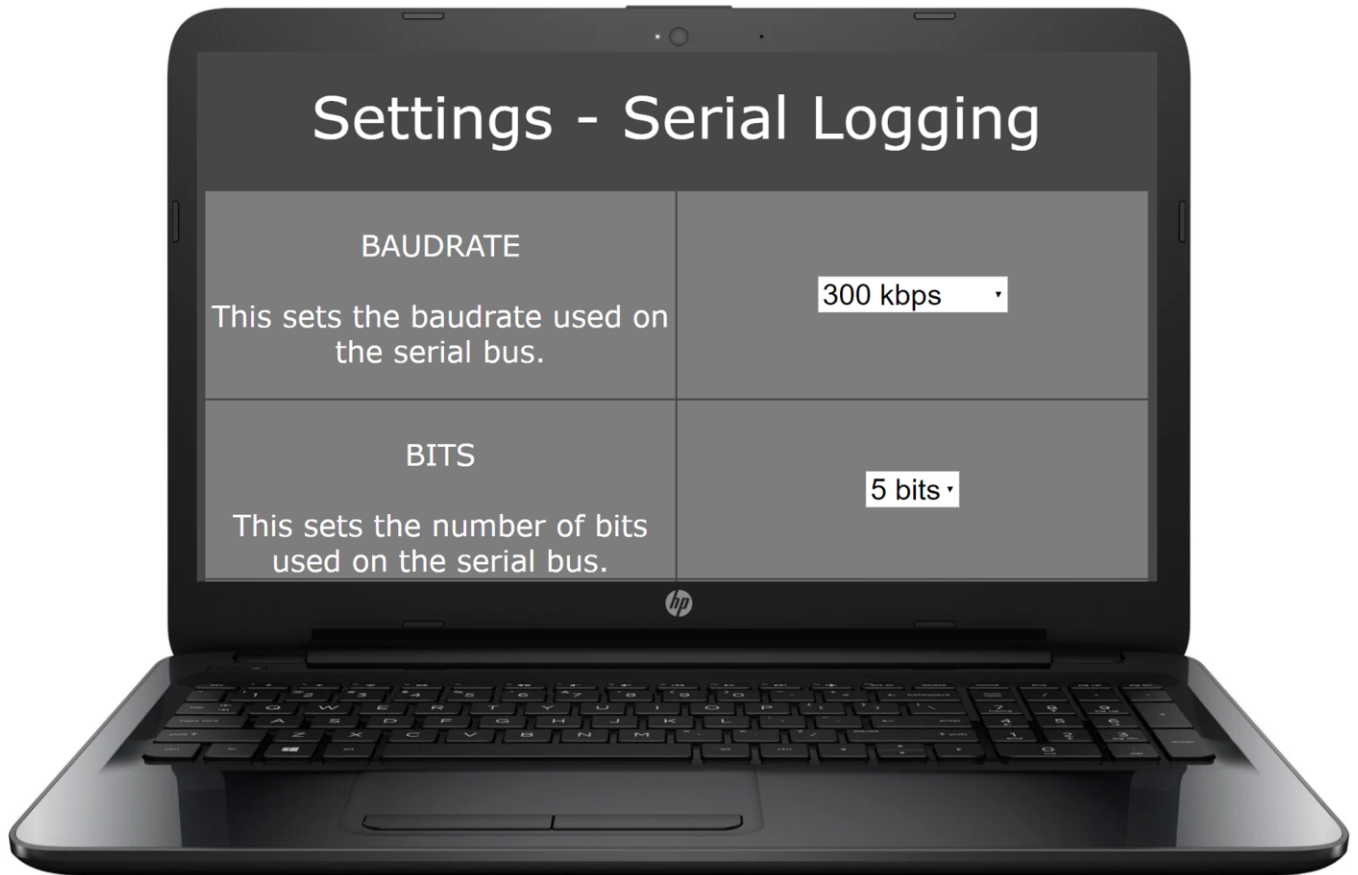

**Memorize your password in case you change it.  
Otherwise access to the device will be impossible!**

Baudrate, parity, bit count,  
and stop bits must match the  
actual serial bus configuration

# Open the advanced settings subpage to access features of the PRO and MAX versions

## W I - F I D E V I C E

- Enables Internet connection via Access Point
- Necessary for other Pro features to work

## T I M E - S T A M P I N G

- Gets current time and date from NTP server
- Enables time-stamping throughout data log

## E M A I L R E P O R T I N G

- Requires SMTP Email account
- Enables periodical Email reports with logged data

## D A T A S T R E A M I N G

- Enables logged data to get streamed over UDP
- Client-side receiver application available on device

The MAX version can be switched to a full-featured USB flash drive.  
To switch to flash drive mode,  
briefly short input MODE to GND